

Change IP Address

1. Run RUINET.EXE
2. Type "1" and type "192.168.1.168" to specify the IP Address of the module to connect, then press <ENTER>
3. Type "1" again, to select "Change IP Address"
4. Type the "number (1..5)" next to the menu to make the changes; e.g. type "1" to change the IP Address; then type the new IP Address, then press <ENTER>
5. Once all the changes are made, press <ESC> to return to the Main menu.
6. Type "1" to restart the FieldServer. After about 1 minute, the FieldServer will complete the restart.

